Ref. 055131



## For lead-acid batteries until 100 Ah.

## **3 FUNCTIONS**

- Test the starting capacity of the battery.
- Indicates the state (good or bad) of the battery.
- **Test the alternator voltage.** It detects if there is aproblem in the load circuit of the vehicle whichcan damaged the battery or the electronic onboard.
- -> Quick analysis results (< 10 sec.) with reading simplification thanks to "colour" codes.



## **C** € - EN 60335-2-29

<b>=</b>		Battery A V CHARGING & STARTING SYSTEM VEHICLE		PRINT PAPER	DIGITAL	RESULT	<b>≡</b> ∗ <b>⊙</b> ∗≡	TEMPERATURE COMPENSATION	cm	<b>i</b> kg		
6-12V	20>100Ah	•	•	12 <b>V</b>	-	-	5/10s	15 min	-	16 x 1.8 x 30	1.5	