Ref. 055148



For lead-acid batteries until 160 Ah.

4 FUNCTIONS

- Test the starting capacity of the battery.
- Indicates the state (good or bad) of the battery.
- Test the charge level of the battery
- **Test the alternator voltage.** It detects if there is aproblem in the load circuit of the vehicle whichcan damaged the battery or the electronic onboard.
- -> Quick analysis results (15 sec.) with reading simplification thanks to "colour" codes.



C € - EN 60335-2-29

=		Battery Battery A V		CHARGING & STARTING SYSTEM VEHICLE	PRINT PAPER	DIGITAL	RESULT	■ • * •••	TEMPERATURE COMPENSATION	cm	kg	
12V	10>160Ah	•	•	12V	-	-	15s	15 min	-	27 x 26 x 13	3,75	