






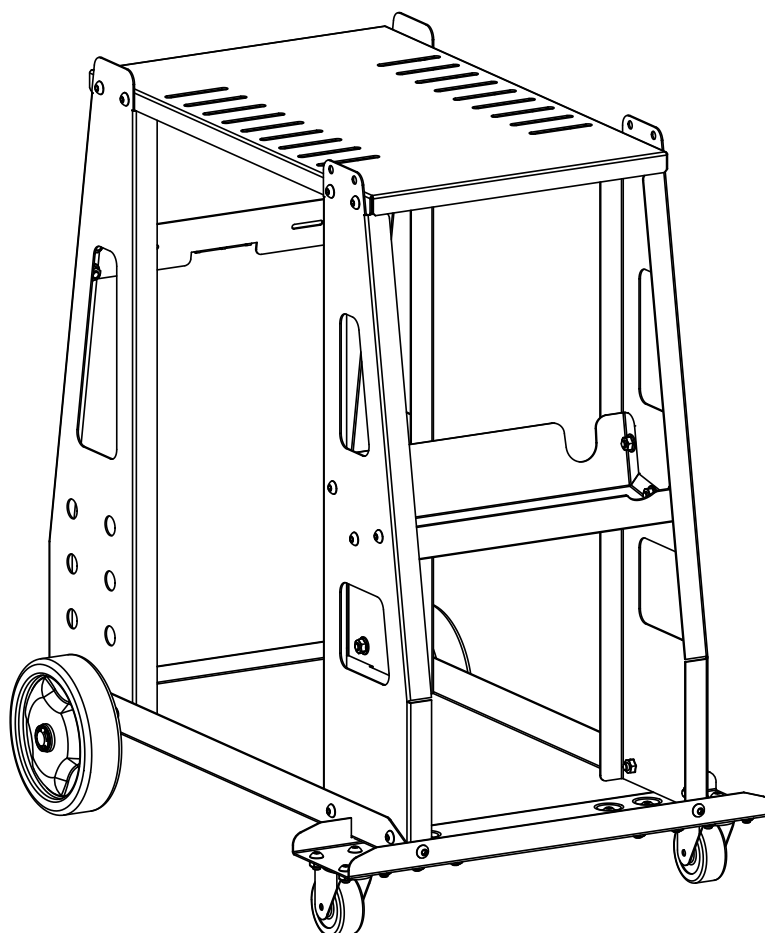


Notice de montage Assembly manual Montageanleitungen

PLASMA 600



PLASMA 600

Tableau récapitulatif / Summary table / Zusammenfassende Tabelle

	Dimensions	Quantity	Reference
	M6 x 10	x 48	41282
	M6	x 40	41151
	M6	x 8	41180
	-	x 2	71380
	-	x 1	56089

Outils / Tools / Werkzeug




n°10




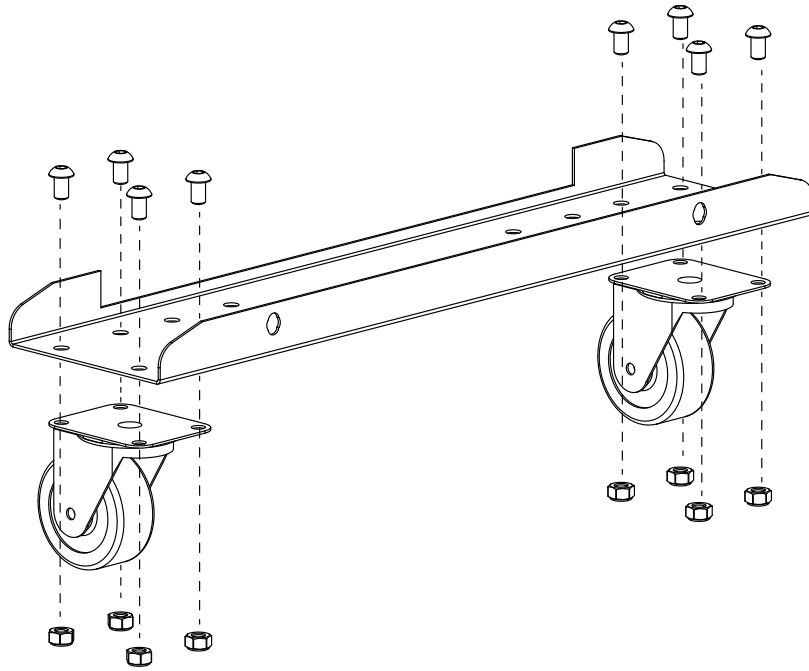
n°5




PLASMA 600


1 |  x8 : M6 x 10  x8 : M6


20 N·m




2 |  x8 : M6 x 10  x8 : M6



8 N·m

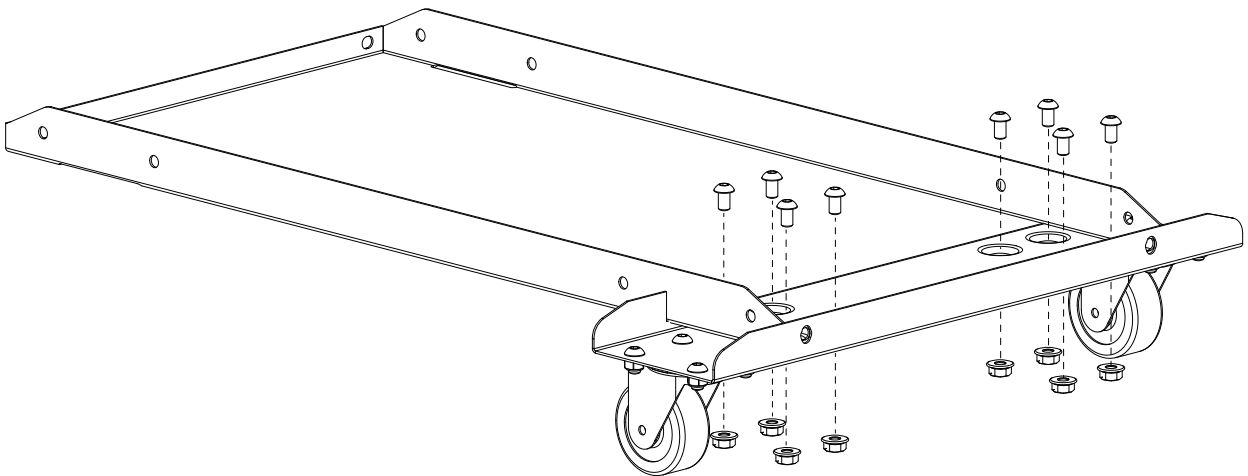


PLASMA 600

3 |  x12 : M6 x 10  x12 : M6

 8 N·m

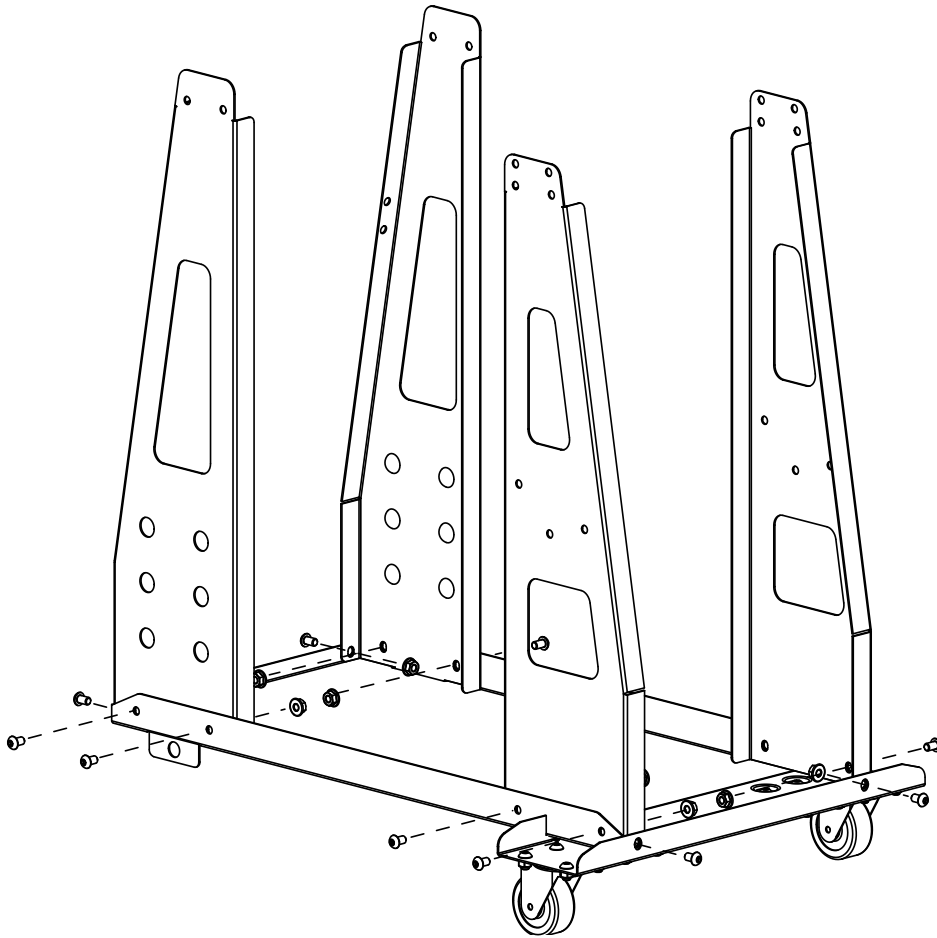


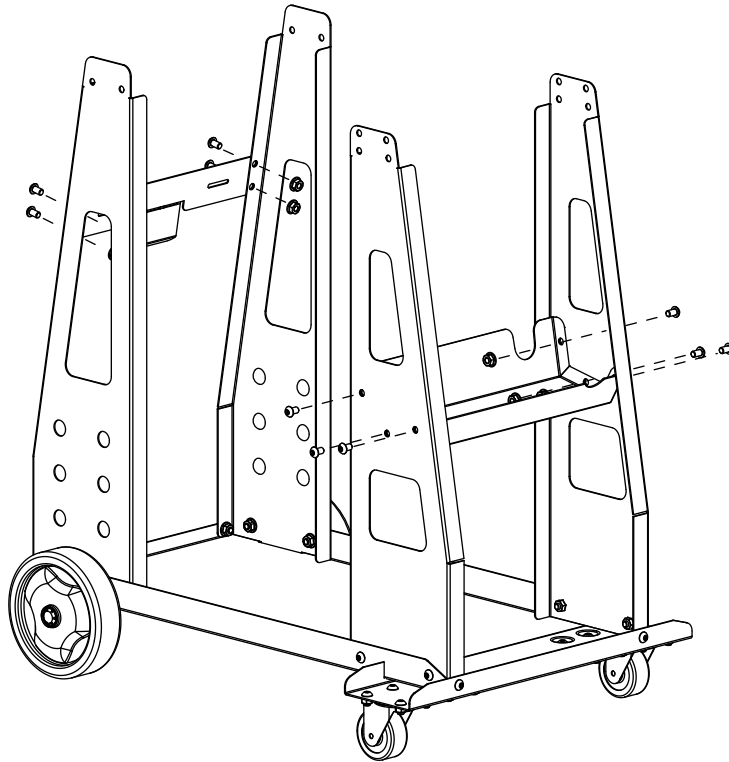
4 |  x2  x1

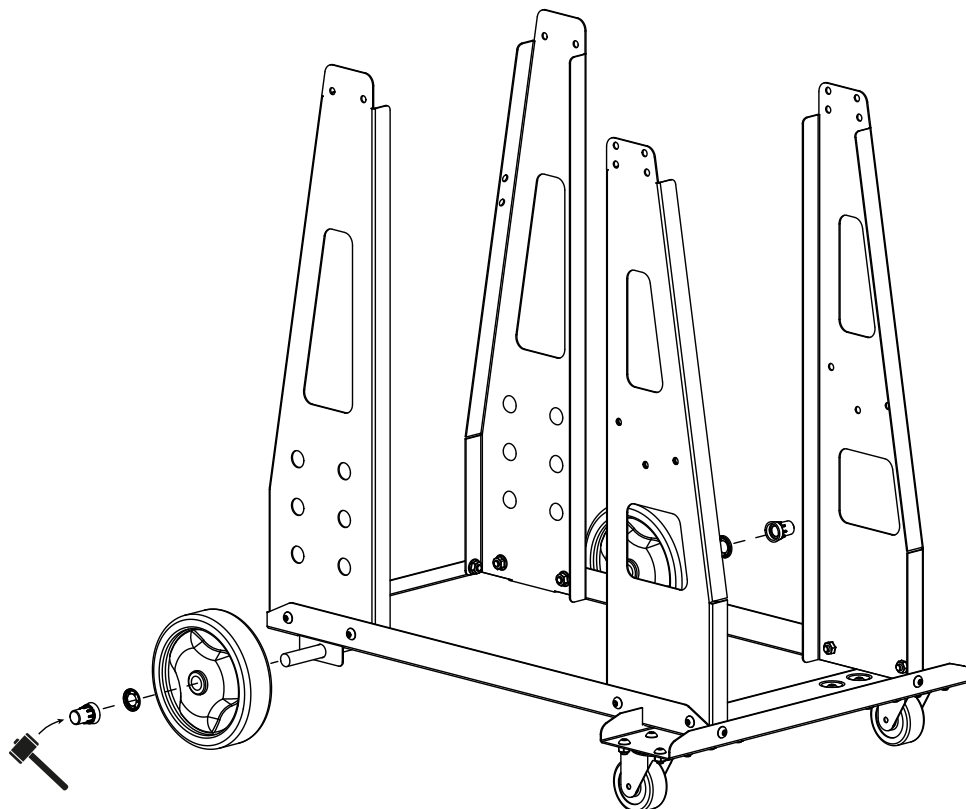


PLASMA 600


5 |  x10 : M6 x 10  x10 : M6


8 N·m




6 |  x8 : M6 x 10  x8 : M6


8 N·m

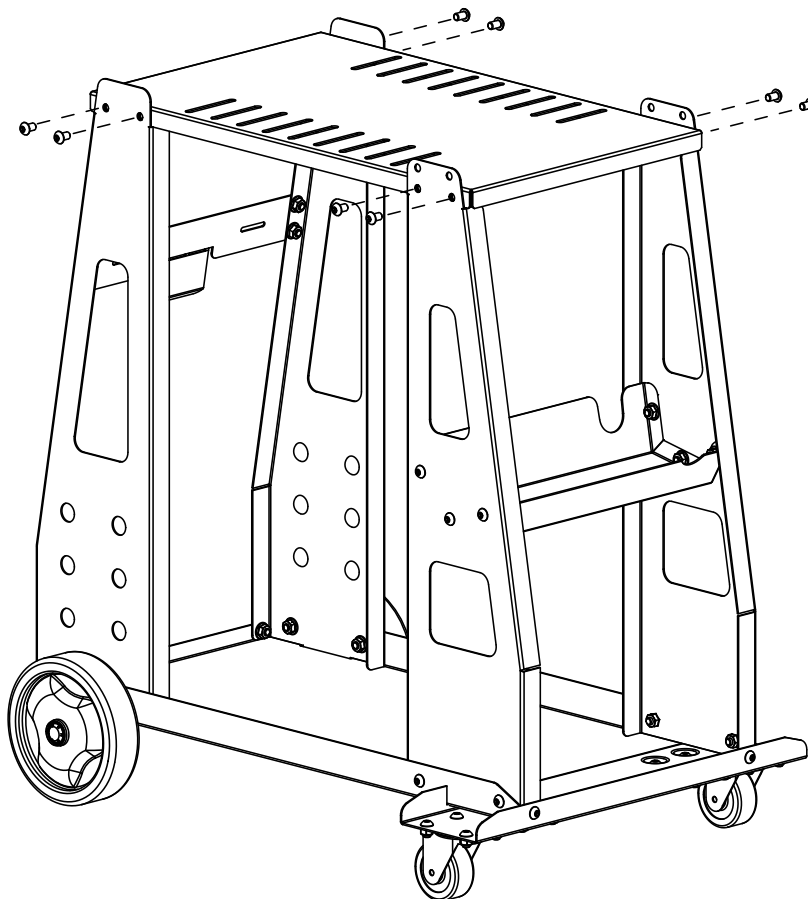


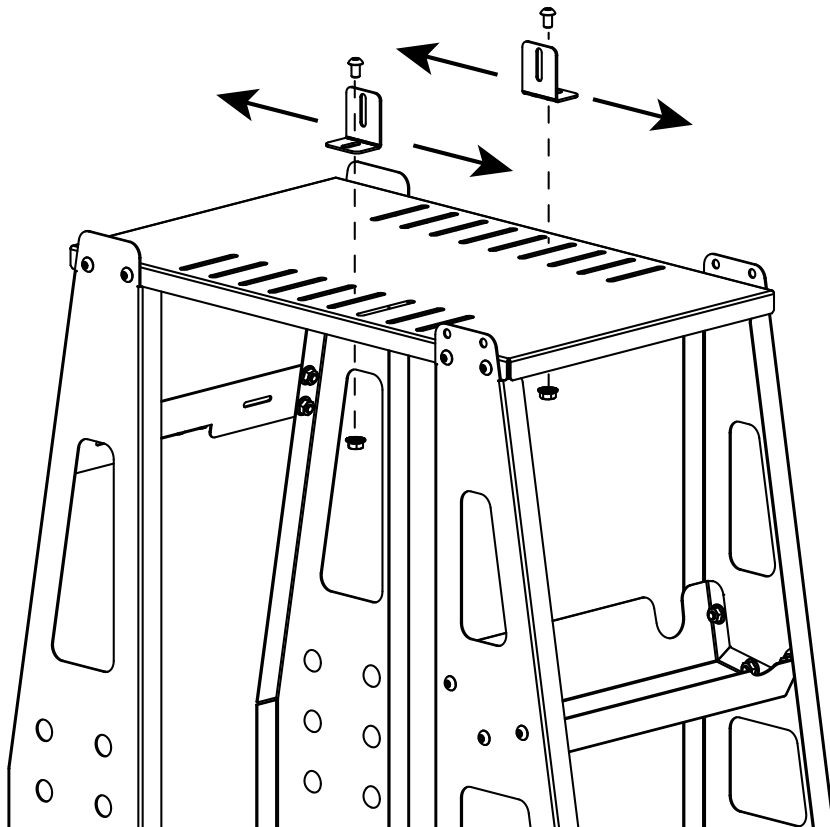
PLASMA 600

7 |


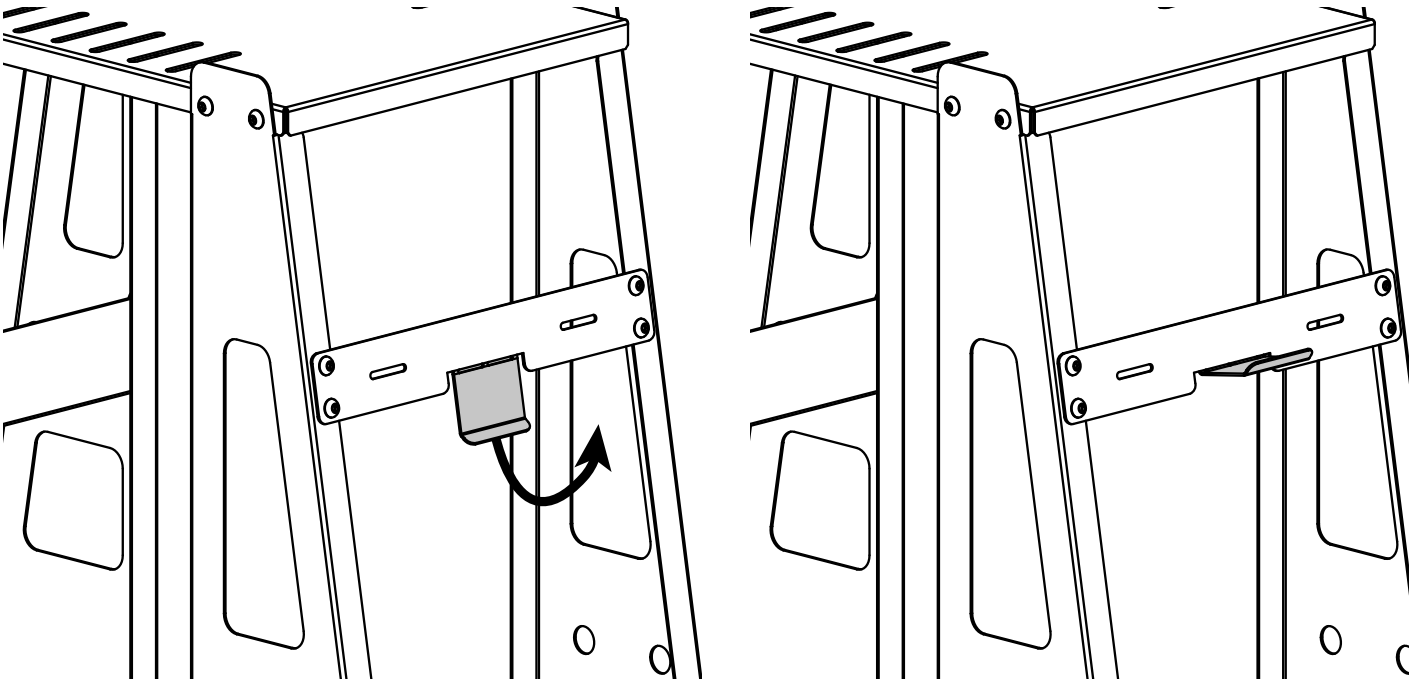


8 |  x2 : M6 x 10  x2 : M6

 8 N·m




PLASMA 600

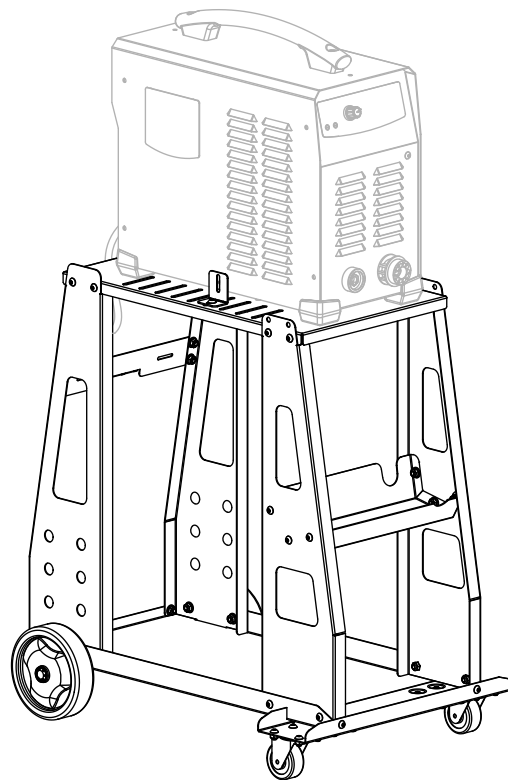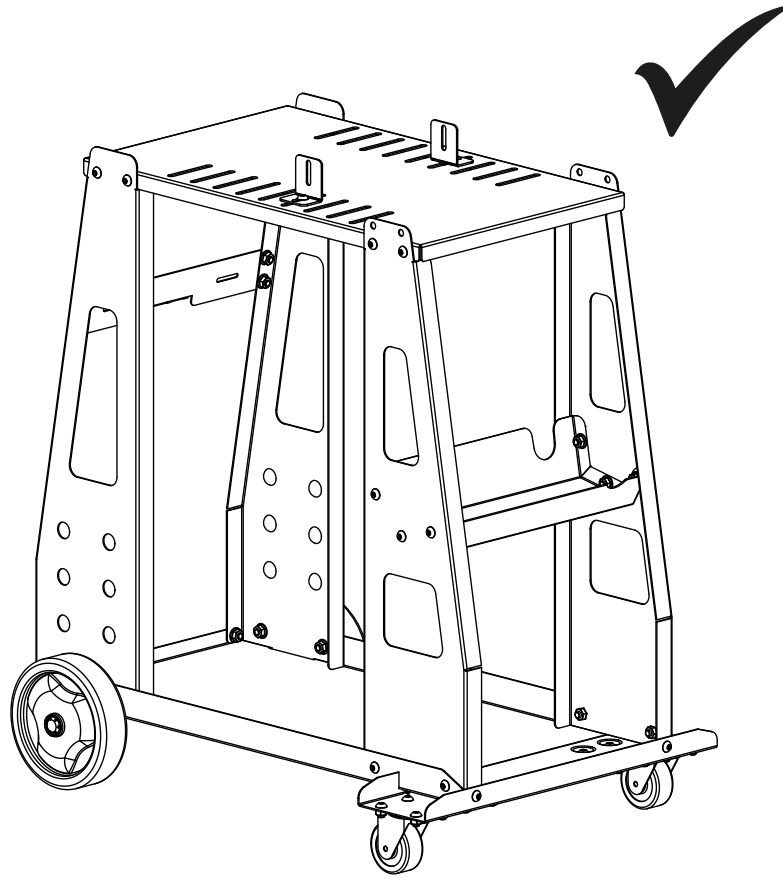

PLASMA 600

DIMENSIONS

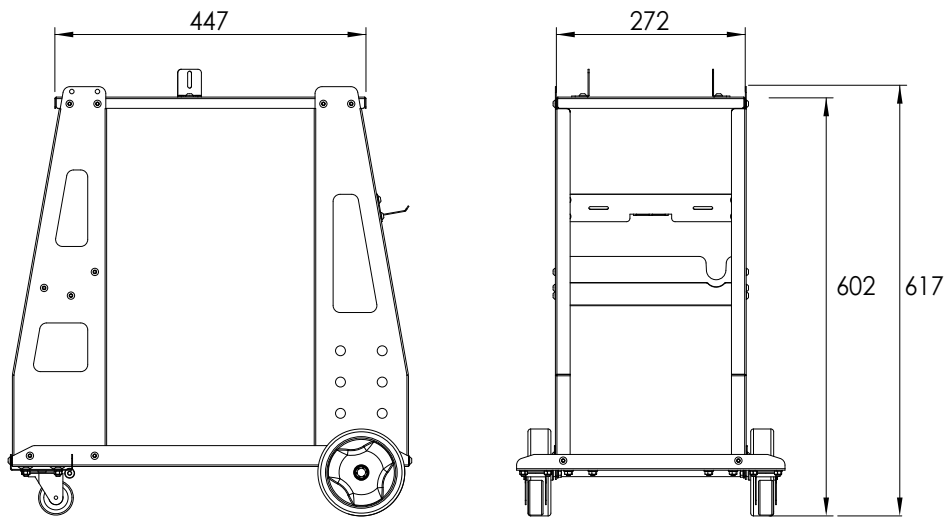

SAS GYS
1, rue de la Croix des Landes
CS 54159
53941 SAINT-BERTHEVIN Cedex
FRANCE